

## Jiangsu Keyland Laser Technology Co.,Ltd


16# GuanghuahuanXinzhuang Town Changshu Jiangsu

Tel: +86 27 8797 0569

Fax: +86 27 8797 0568

E-mail: xia.lv@keylandlaser.com

### Dismantling of Laser Cutting Machine

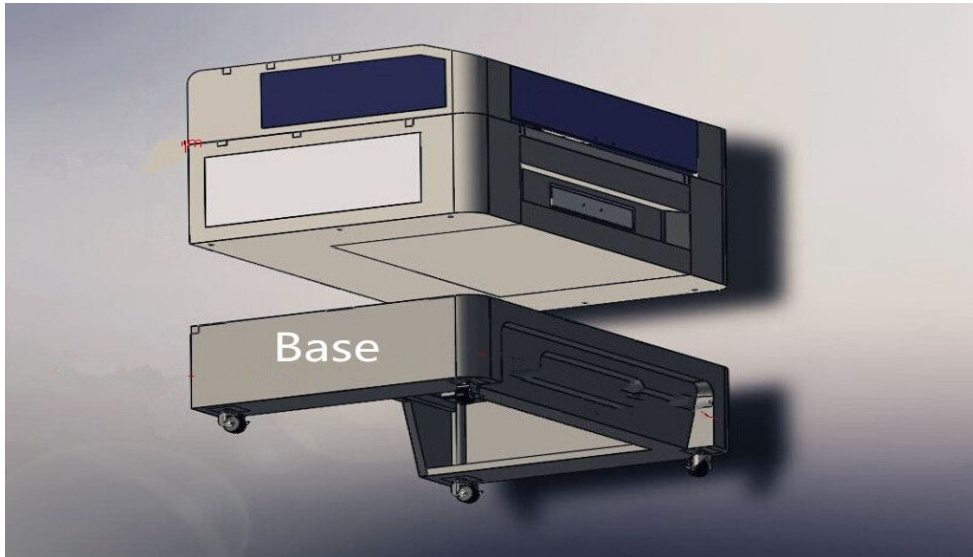

#### 1.The machine you will get it



## 2.Remove the screw on base





**3.Move machine' base and upper into door.**

**4.Put Upper onto Base, then fix screw.**